MITSUBISHI MOTORS

SERVICE BULLETIN

GLOBAL AFTER SALES OFFICE, MITSUBISHI MOTORS CORPORATION

PURPOSE : INFORMATION	ISSUE NO. : MSB-11E54-002	DATE : 2011-03-05
SUBJECT : REAR VIEW CAMERA AND REAR VIEW MONITOR-INTEGRATED INSIDE-REAR VIEW MIRROR		<MODEL> (EUR/RUSSIA) PAJERO/MONTERO (V80/90) <M/Y> 11
GROUP : CHASSIS ELECTRICAL		

1. Description:

According to the introduction of the rear view camera and the rear view monitor-integrated inside-rear view mirror, additional service information are added to the applicable Workshop Manuals. This Service Bulletin contains the added descriptions.

2. Applicable Manuals:

<EUR>

Manual	Pub. No.	Attached Sheet
2011 PAJERO/MONTERO Workshop Manual CD-ROM	CBKE11E2-CD (English) CBKS11E2-CD (Spanish) CBKF11E2-CD (French) CBKG11E2-CD (German)	Attached sheet 1–6

<RUSSIA>

Underneath Manual	Underneath Pub. No.	Attached Sheet
2011 PAJERO Workshop Manual	N/A	Attached sheet 1–6

There may be some attached sheets not included in this Service Bulletin because they are not applicable to your market. Their sheet numbers are not listed in the above table.

3. Effective Date:

From the end of February 2011

4. Details:

See Attached sheets 1 to 6.

Attached sheet 1

REAR VIEW CAMERA


GENERAL INFORMATION

M1540905600272

OUTLINE OF CHANGE


A rear-view camera has been installed in the back door garnish. The rear view monitor-integrated inside-rear view mirror (with automatic anti-dazzling function) displays an image which this camera captures.The rear view camera supports the driver to watch rear view, thus improving safety and maneuverability.

CONSTRUCTION DIAGRAM

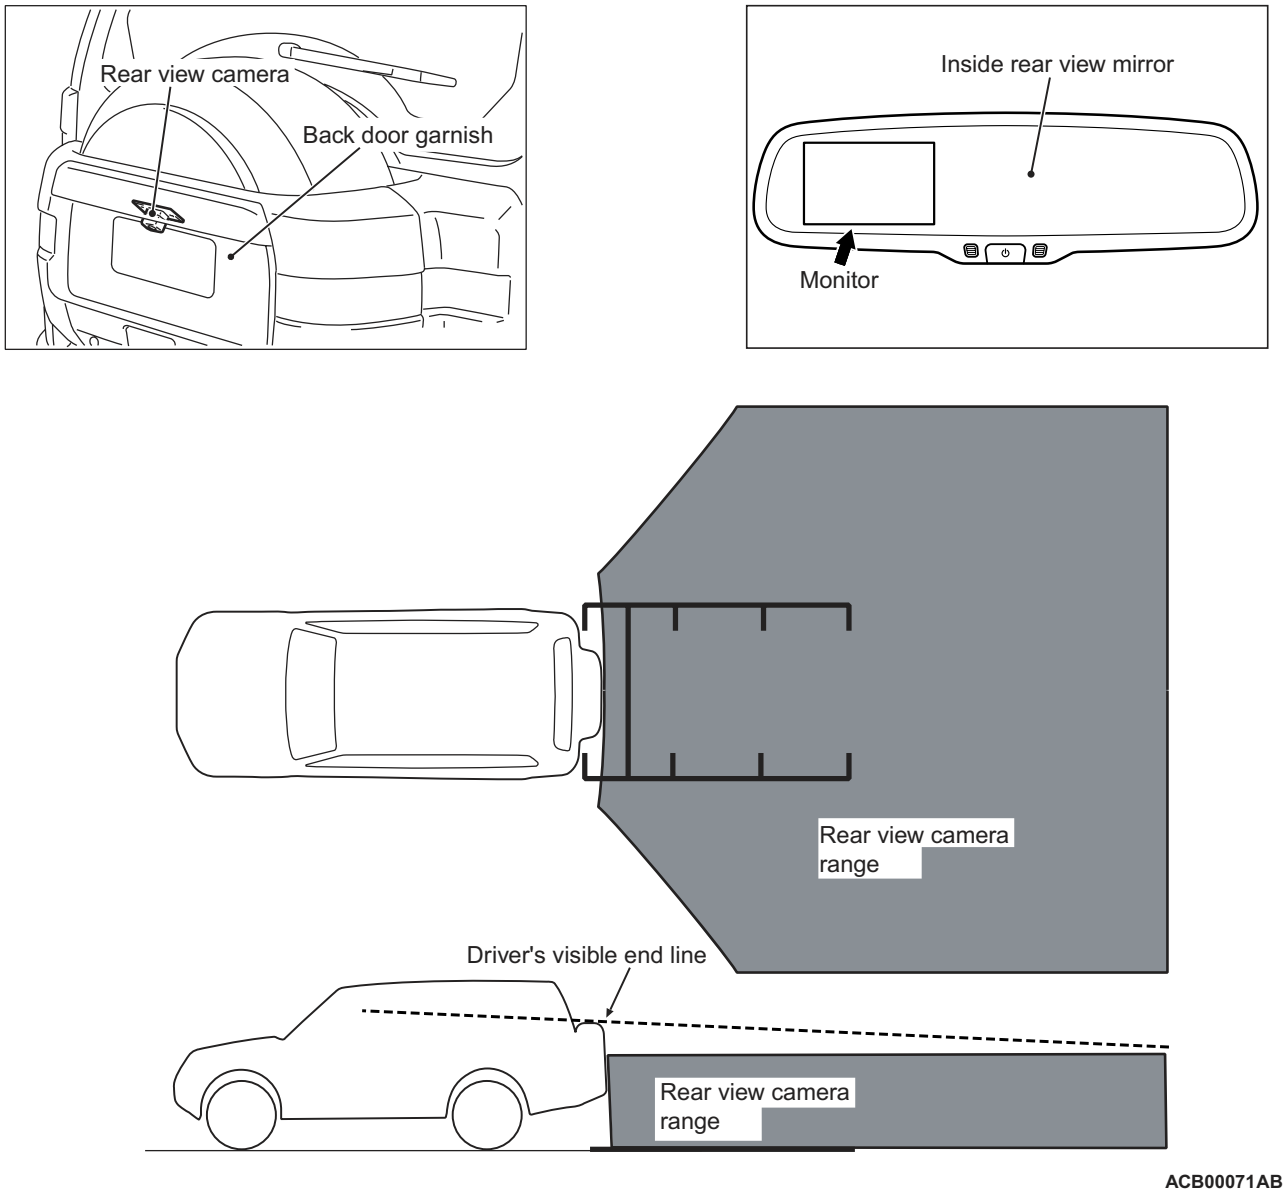


ACB00071AB

OPERATION

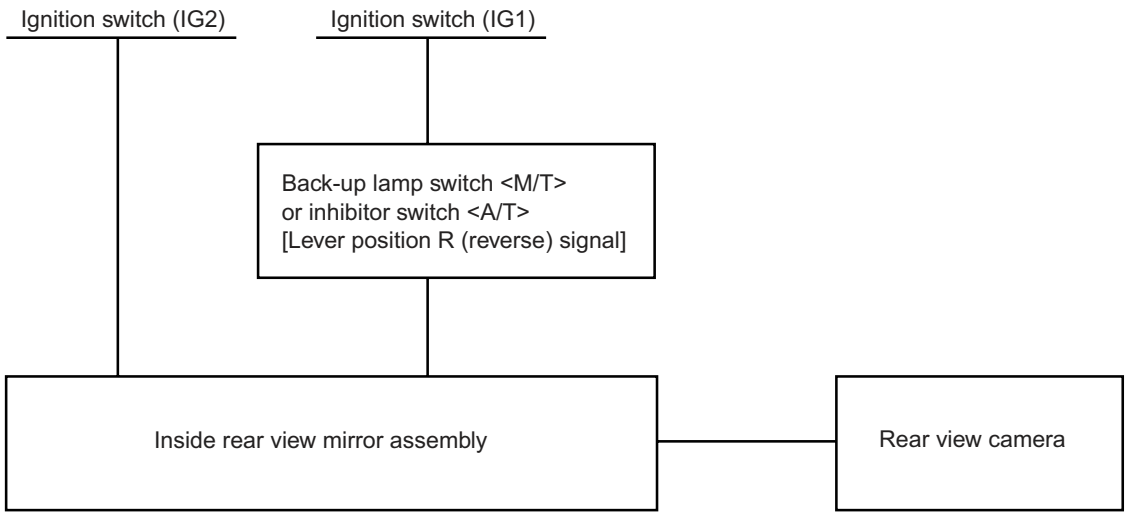

AC604055AB

- When the shift lever <M/T> or selector lever <A/T> is moved to the R (Reverse) position with the ignition switch ON, the rear view monitor (integrated in inside-rear view mirror) displays the rear view via the rear-view camera automatically.

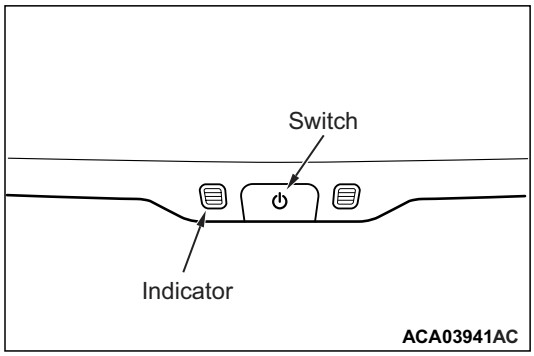

ACA03941AC

- The indicator illuminates green when the rear view monitor (integrated in inside-rear view mirror) displays the rear view.
- Functions can be changed over each time the switch is pressed.

Switch operation and system operation


Time for the switch to be pressed (second)	Operation
0 – 6	Monitor on and off. When the ignition switch is turned ON, the monitor will be switched on automatically.If the switch is pressed to switch the monitor off, the indicator illuminates orange.
6 – 12	Language selection for warning text on the monitor. Languages is changed over each time the switch is pressed.An applicable language will be memorized in five seconds after it is selected.
12 – 15	Setting the monitor to be always off. The indicator illuminates orange.When the ignition switch is turned ON at the next time, this monitor-OFF setting is memorized.If the switch is pressed, the monitor will be restored.

Attached sheet 3

REAR VIEW CAMERA REMOVAL AND INSTALLATION

M1540905500060

Pre-removal Operation
Open the back door garnish.

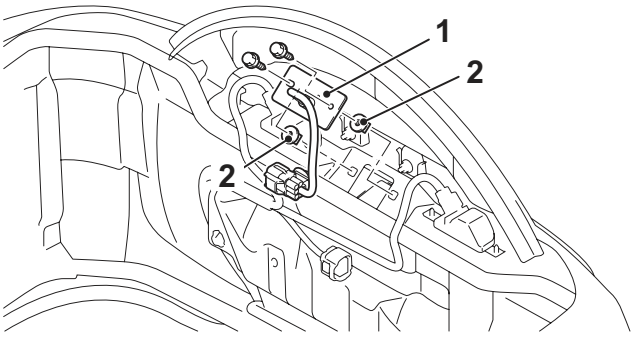


AC707564AB

Removal steps
1. Rear view camera
2. Screw grommet

Attached sheet 4

AUTOMATIC ANTI-DAZZLING MIRROR <VEHICLES WITHOUT MMCS>

M1901006800518

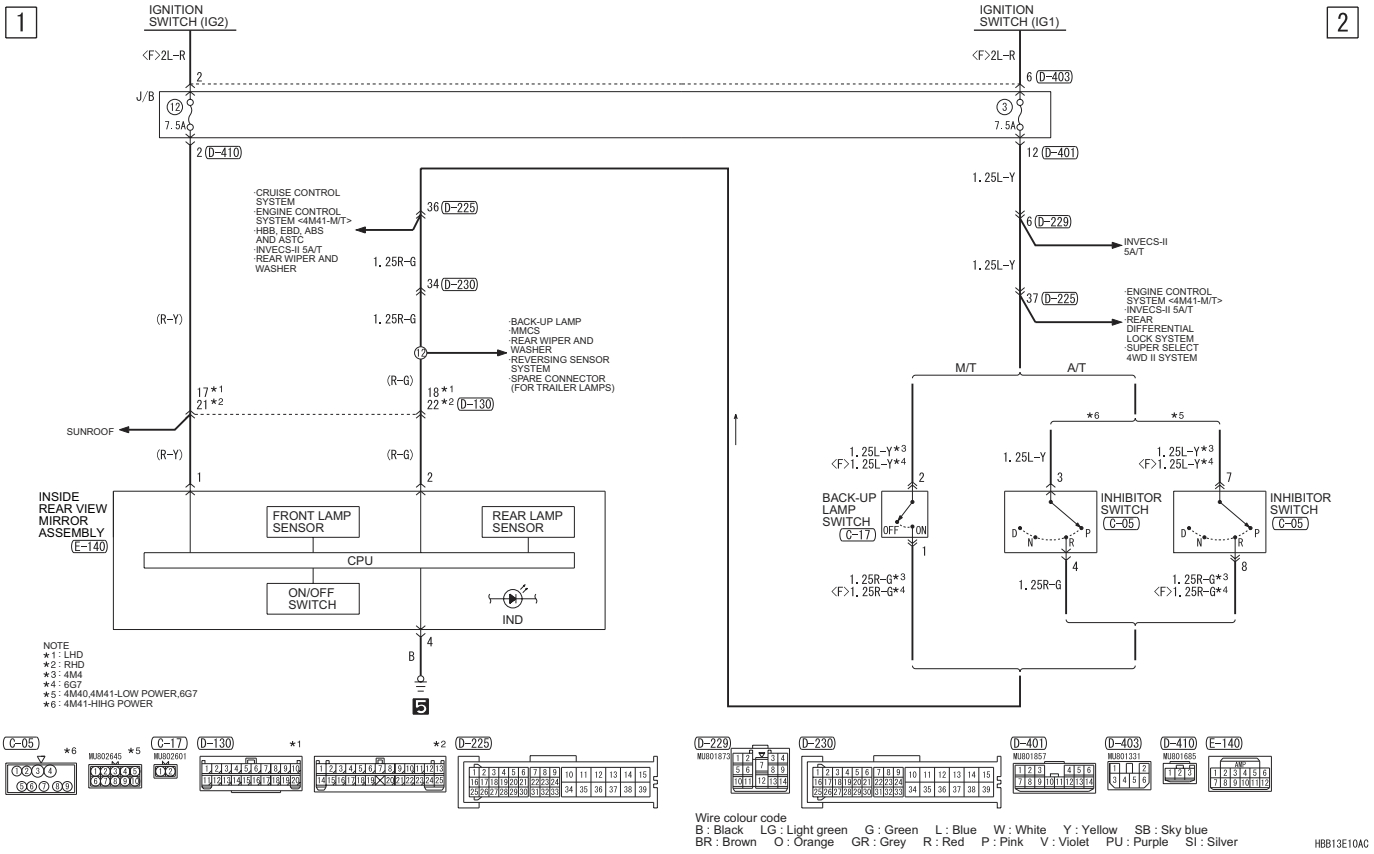


Wire colour code
B : Black LG : Light green G : Green L : Blue W : White Y : Yellow SB : Sky blue
BR : Brown O : Orange GR : Grey R : Red P : Pink V : Violet PU : Purple SI : Silver

HBB13E10AC

Attached sheet 5

REAR VIEW CAMERA <VEHICLES WITHOUT MMCS>

M1901025600171

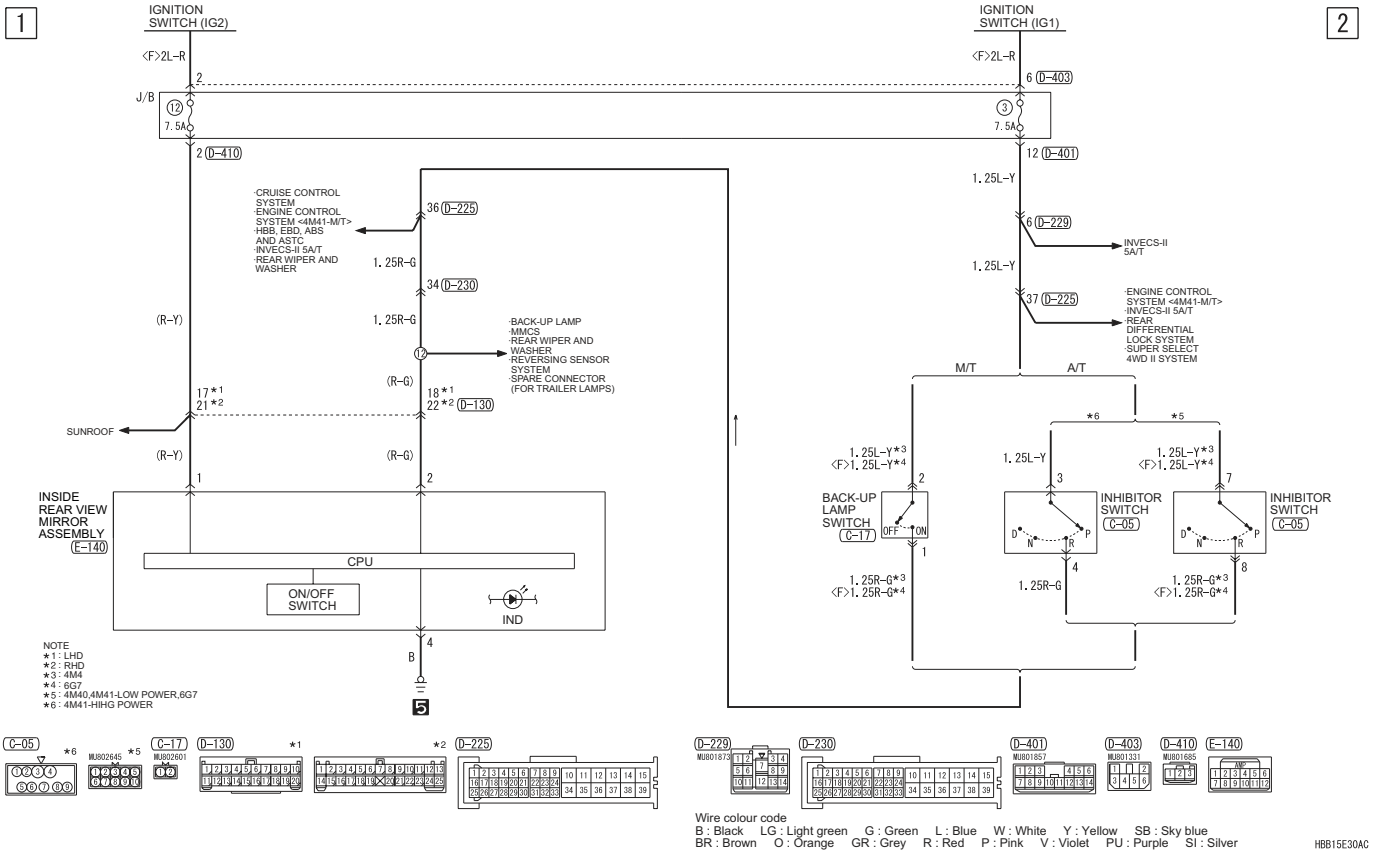

REAR VIEW CAMERA <VEHICLES WITHOUT MMCS> (CONTINUED)

3

