SERVICE BULLETIN

MITSUBISHI MOTORS

GLOBAL AFTER SALES OFFICE, MITSUBISHI MOTORS CORPORATION

PURPOSE : CHANGE	ISSUE NO. : MSB-14EXL14-001	DATE : 2014-02-18
SUBJECT : WATER PUMP REMOVAL AND INSTALLATION		<DESTINATION/MODEL> (EUR/MMAL/NZ) <M/Y> 14
GROUP : EV COOLING SYSTEM(Gr:14B)		OUTLANDER PHEV(GF0W)

1. Description :

Please refer to the attached document for the information about the change of mention in the applicable service manual.(Maintenance procedure has been changed since the electric water pump and its bracket is separately provided)

2. Affected service manuals :

EU

Applicable manual	Pub.No	Applicable title(Info-ID)	Contents
2014 OUTLANDER/ OUTLANDER PHEV Workshop Manual	CGFE14E2-CD(English) CGFF14E2-CD(French) CGFG14E2-CD(German) CGFS14E2-CD(Spanish) CGFI14E2-CD(Italian)	WATER PUMP REMOVAL AND INSTALLATION (M142-00-210-06800-01)	Attached sheet2 (1/3,3/3)

AUSTRALIA, NEW ZEALAND

Applicable manual	Pub.No	Applicable title(Info-ID)	Contents
2014 OUTLANDER/ OUTLANDER PHEV Workshop Manual	AU900408 (AUSTRALIA), DRAFT(NEW ZEALAND)	WATER PUMP REMOVAL AND INSTALLATION (M142-00-210-08000-01)	Attached sheet2 (2/3,3/3)

3. About the details :

Please refer to the attached document (Attached sheet 2)

Attached sheet 2 (1/3)

REMOVAL AND INSTALLATION


CAUTION

- **If the electric water pump is dropped, do not reuse that electric water pump.**
- **Do not operate the electric water pump when the motor coolant is empty. If the electric water pump is operated, the electric water pump service life may be reduced. Therefore, do not reuse that electric water pump.**

Pre-removal and post-installation operation
- Motor Coolant Draining and refilling (Refer to).
- Engine Room Under Cover Front A, B Removal and Installation (Refer to GROUP 51 – Under Cover <PHEV>).
- Front Bumper Assembly Removal and Installation (Refer to GROUP 51 – Front Bumper Assembly).

Insert the Attached sheet 2 (3/3)

<Old>

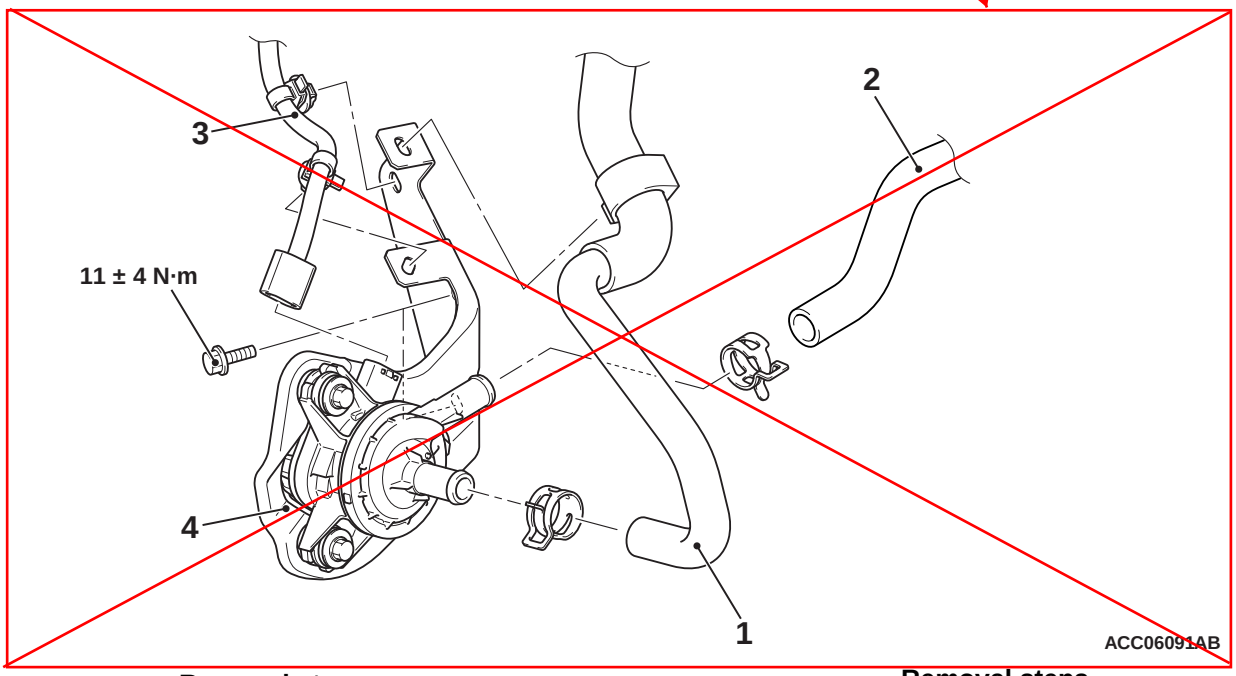

			Removal steps
<<A>>	>>A<<	1.	EV radiator condenser tank hose B connection
<<A>>	>>A<<	2.	EV radiator piping hose F connection

Removal steps
3 Harness connection
4. Electric water pump

<Old>

5. <New>

4. Water pump bracket

<Added>

REMOVAL SERVICE POINTS

<<A>> EV RADIATOR CONDENSER TANK HOSE AND EV

REMOVAL AND INSTALLATION


CAUTION

- **If the electric water pump is dropped, do not reuse that electric water pump.**
- **Do not operate the electric water pump when the motor coolant is empty. If the electric water pump is operated, the electric water pump service life may be reduced. Therefore, do not reuse that electric water pump.**

Pre-removal and post-installation operation
- Motor Coolant Draining and refilling (Refer to).
- Engine Room Under Cover Front A, B Removal and Installation (Refer to GROUP 51 – Under Cover).
- Front Bumper Assembly Removal and Installation (Refer to GROUP 51 – Front Bumper Assembly).

Insert the Attached sheet 2 (3/3)

<Old>

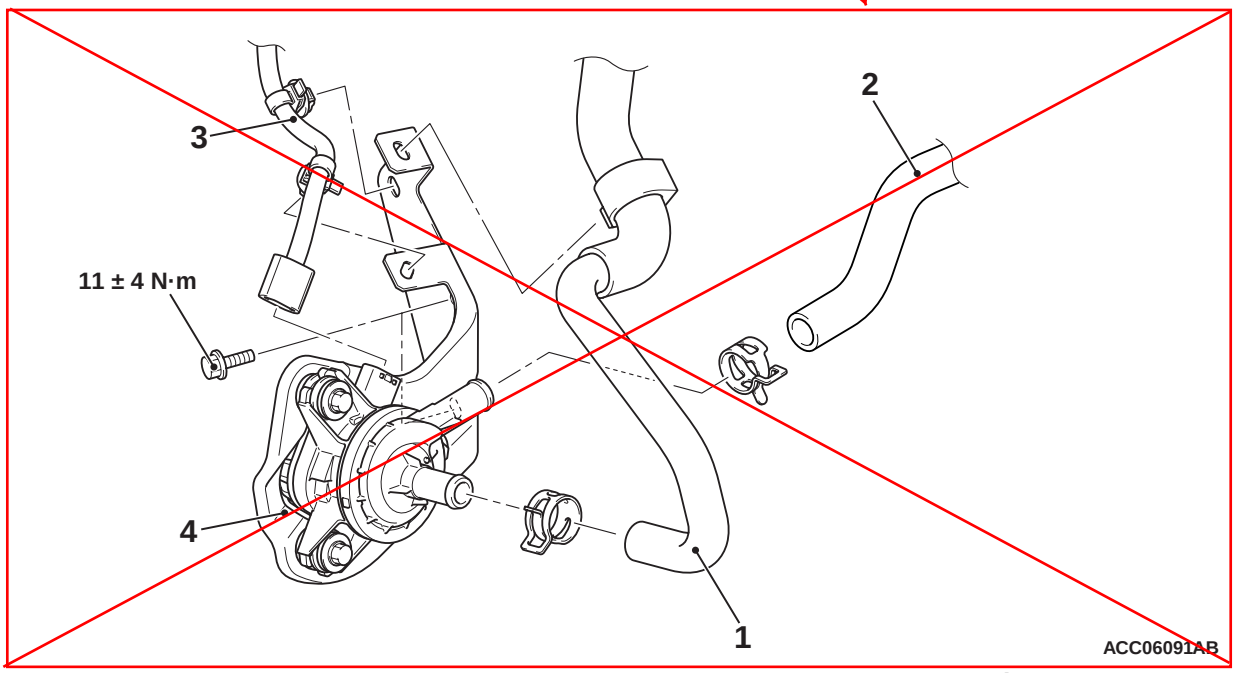

			Removal steps
<<A>>	>>A<<	1.	EV radiator condenser tank hose B connection
<<A>>	>>A<<	2.	EV radiator piping hose F connection

Removal steps
3 Harness connection
4. Electric water pump <Old>
5. <New>

4. Water pump bracket <Added>

REMOVAL SERVICE POINTS

<<A>> EV RADIATOR CONDENSER TANK HOSE AND EV

<New>

