SERVICE BULLETIN

MITSUBISHI MOTORS

GLOBAL AFTER SALES OFFICE, MITSUBISHI MOTORS CORPORATION

PURPOSE : Addition	ISSUE NO. : MSB-15E42-007	DATE : 2015-12-21
SUBJECT : Addition of the service points regarding the disassembly and reassembly of the keyless entry transmitter for the vehicles for Israel		<DESTINATION/MODEL> (Israel) <M/Y> 16
GROUP : Gr:42(Body)		LANCER(CY0A)/LANCER SPORTBACK(CX0A)

1. Description :

Please refer to the attached document for the information about the addition of mention in the applicable service manual.

2. Affected service manuals :

Destination	Applicable manual	Pub. No.	Applicable title (INFO ID)	Content
EU	2016 LANCER/ LANCER SPORTBACK Workshop Manual	CCAE16E1-CD (Eng) CCAF16E1-CD (Fre) CCAG16E1-CD (Ger) CCAS16E1-CD (Spa) CCAI16E1-CD (Ita)	Added below "TRANSMITTER DISASSEMBLY AND REASSEMBLY " (M427-50-610-14400-01)	Attached sheet 1

3. About the details :

Please refer to the attached document (Attached sheet 1)

Attached sheet 1 (1/2)

DISASSEMBLY SERVICE POINT

<<A>> BATTERY REMOVAL

⚠ CAUTION

Do not allow water or dust to enter the inside of the transmitter assembly when it is open. Also, do not touch the precision electronic device.

REASSEMBLY SERVICE POINT

>>A<< BATTERY INSTALLATION

⚠ CAUTION

Do not allow water or dust to enter the inside of the transmitter assembly when it is open. Also, do not touch the precision electronic device.

Install a new battery to the transmitter assembly with its (+) side facing towards the cover assembly side.

Battery required for replacement: Coin type battery CR1620

Insert the attached sheet 1 (2/2)

<Added>


DISASSEMBLY AND REASSEMBLY <Vehicles for Israel>

M1427506100069

⚠ CAUTION

When disassembling the transmitter, static electricity may damage the internal electronic circuit. Therefore, be sure to release static electricity from your body before disassembling the transmitter.

Post-installation operation
- Transmitter operation check

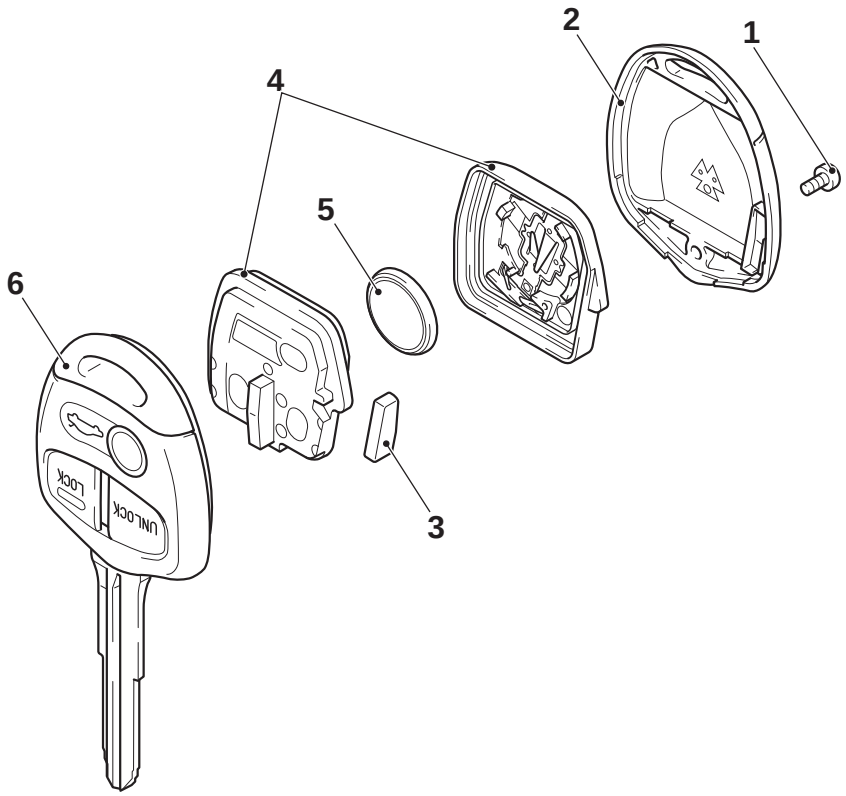

AC613096AB

Disassembly steps


1. Screw
2. Upper cover
3. Transponder
4. Transmitter assembly

>>A<< 5. Battery

6. Master key

REASSEMBLY SERVICE POINT

>>A<< BATTERY INSTALLATION

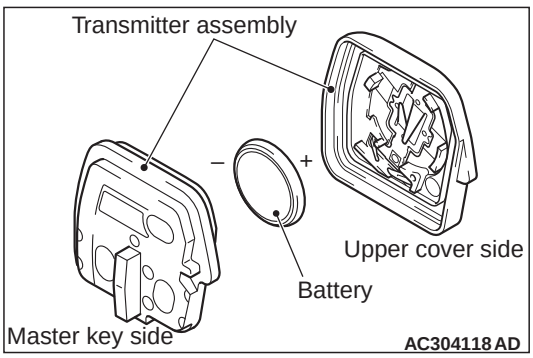

Install a new battery, with (+) side facing the upper cover of the transmitter assembly.

Battery required for replacement: Lithium battery CR1616