SERVICE BULLETIN

MITSUBISHI MOTORS

GLOBAL AFTER SALES OFFICE, MITSUBISHI MOTORS CORPORATION

PURPOSE : INFORMATION	ISSUE NO. : MSB-12EXL11-002	DATE : 2012-12-3
SUBJECT : OIL FEEDER CONTROL VALVE		<Destination/Model> (G.EXP/EUR/RUSSIA/MMAL/NZ) <M/Y> 03-09/11
GROUP : ENGINE		COLT/COLT CZ3/COLT CZT/COLT PLUS

1. Description:

See the attached sheets for the information about the change of mention in the applicable service manual.

2. Applicable manual:

See the attached sheets

3. Details:

See the attached sheets

〈EU〉

Applicable manual	Pub. No.	Applicable title (INFO ID)	Content
2005-2007 COLT/COLT CZ3/ COLT CZT Workshop Manual	ENG: CZME07E1-CD FRE: CZMF07E1-CD GER: CZMG07E1-CD SPA: CZMS07E1-CD	CAMSHAFT AND VALVE STEM SEAL REMOVAL AND INSTALLATION (M112-00-660-86800-01)	Attached sheet 3
		ROCKER ARM AND CAMSHAFT REMOVAL AND INSTALLATION (M113-00-541-02700-01)	
2008 COLT Workshop Manual	ENG: CZME08E1-CD FRE: CZMF08E1-CD GER: CZMG08E1-CD SPA: CZMS08E1-CD	CAMSHAFT AND VALVE STEM SEAL REMOVAL AND INSTALLATION (M112-00-661-43000-01)	
		ROCKER ARM AND CAMSHAFT REMOVAL AND INSTALLATION (M113-00-541-02700-01)	
2009 COLT Workshop Manual	ENG: CZME09E2-CD FRE: CZMF09E2-CD GER: CZMG09E2-CD SPA: CZMS09E2-CD ITA: CZMI09E2-CD	CAMSHAFT AND VALVE STEM SEAL REMOVAL AND INSTALLATION (M112-00-662-04600-01)	
		ROCKER ARM AND CAMSHAFT REMOVAL AND INSTALLATION (M113-00-541-02700-01)	
2011 COLT Workshop Manual	ENG: CZME11E1-CD FRE: CZMF11E1-CD GER: CZMG11E1-CD SPA: CZMS11E1-CD ITA: CZMI11E1-CD	CAMSHAFT AND VALVE STEM SEAL REMOVAL AND INSTALLATION (M112-00-662-32500-01)	
		ROCKER ARM AND CAMSHAFT REMOVAL AND INSTALLATION (M113-00-542-23500-01)	

<G.EXP/NZ>

Applicable manual	Pub. No.	Applicable title (INFO ID)	Content
2003-2007 COLT/COLT PLUS Workshop Manual	PWPE0402R-4 NZ:DRAFT	CAMSHAFT AND VALVE STEM SEAL REMOVAL AND INSTALLATION (05, 06MY: M112-00-660-88000-01) (07MY: M112-00-661-38800-01)	Attached sheet 3
		ROCKER ARM AND CAMSHAFT REMOVAL AND INSTALLATION (M113-00-541-03800-01)	
2011 COLT/COLT PLUS Workshop Manual	PWPE1001R NZ:DRAFT	CAMSHAFT AND VALVE STEM SEAL REMOVAL AND INSTALLATION (M112-00-662-29500-01)	
		ROCKER ARM AND CAMSHAFT REMOVAL AND INSTALLATION (M113-00-542-22400-01)	

<MMAL/NZ>

Applicable manual	Pub. No.	Applicable page	Content
2006 COLT Workshop Manual	DRAFT	11C-27, 11D-29	Attached sheet 3
2007 COLT Workshop Manual	DRAFT	11C-26, 11D-29	

INSTALLATION SERVICE POINT

O-RING/OIL FEEDER CONTROL VALVE (OIL CONTROL VALVE) INSTALLATION

⚠ CAUTION

- **Do not reuse the O-ring.**

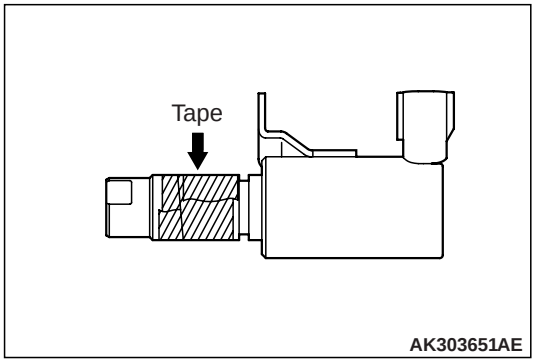

- **Install the O-ring after wrap a tape not having adhesion (such as a seal tape) round the notch on the oil passage of oil feeder control valve to prevent it from damage. The damaged O-ring may cause oil leakage.**

1. Apply a small amount of engine oil to the O-ring and then install it to the oil feeder control valve.
2. Assemble the oil feeder control valve to the cylinder head.
3. Tighten the oil feeder control valve mounting bolt to the specified torque.

   Tightening torque: 11 ± 1 N·m