SERVICE BULLETIN

MITSUBISHI MOTORS

GLOBAL AFTER SALES OFFICE, MITSUBISHI MOTORS CORPORATION

PURPOSE : INFORMATION	ISSUE NO. : MSB-14E42-001	DATE : 2014-08-07
SUBJECT : INFORMATION ON 2014.5 OUTLANDER PHEV		<DESTINATION/MODEL> (EUR/RUSSIA) <M/Y> 14.5
GROUP : BODY(Gr:42)		OUTLANDER PHEV(GF0W)

1. Description :

This Service Bulletin contains the information about the 2014.5 OUTLANDER PHEV Workshop Manual.

2. Affected service manuals :

Applicable manual	Pub. No.	Applicable title (INFO-ID)	Contents
2014.5 OUTLANDER / OUTLANDER PHEV WORKSHOP MANUAL	CGFE14E3-CD (ENG) CGFF14E3-CD (FRE) CGFG14E3-CD (GER) CGFS14E3-CD (SPA) CGFI14E3-CD (ITA) RUSSIA:N/A	TAILGATE REMOVAL AND INSTALLATION <VEHICLES WITHOUT ELECTRIC TAILGATE> (M424-00-111-10400-01)	Attached sheet 1,2
		TAILGATE REMOVAL AND INSTALLATION <VEHICLES WITH ELECTRIC TAILGATE> (M424-00-111-11500-01))	Attached sheet 3,4

3. About the details :

Please refer to the attached document (Attached sheet 1-4)

4. Effective time : From the vehicles of 14.5MY


TAILGATE <VEHICLES WITHOUT ELECTRIC TAILGATE>


TAILGATE

REMOVAL AND INSTALLATION

M1424001101104

Pre-removal operation	Post-installation operation
• Tailgate trim removal (Refer to GROUP 52A – Tailgate Trim .) • Rear wiper blade assembly, rear wiper motor and rear washer hose removal (Refer to GROUP 51 – Rear Wiper and Washer .) • High-mounted stop lamp assembly removal (Refer to GROUP 54A – High-mounted stop lamp .) • Tailgate garnish removal (Refer to GROUP 51 – Tailgate Garnish .) • Tailgate window glass removal	• Tailgate alignment • Adjustment of tailgate height • Tailgate window glass installation • Tailgate garnish installation (Refer to GROUP 51 – Tailgate Garnish .) • High-mounted stop lamp assembly installation (Refer to GROUP 54A – High-mounted stop lamp .) • Rear wiper blade assembly, rear wiper motor and rear washer hose installation (Refer to GROUP 51 – Rear wiper and washer .) • Tailgate trim installation (Refer to GROUP 52A – Tailgate Trim .)

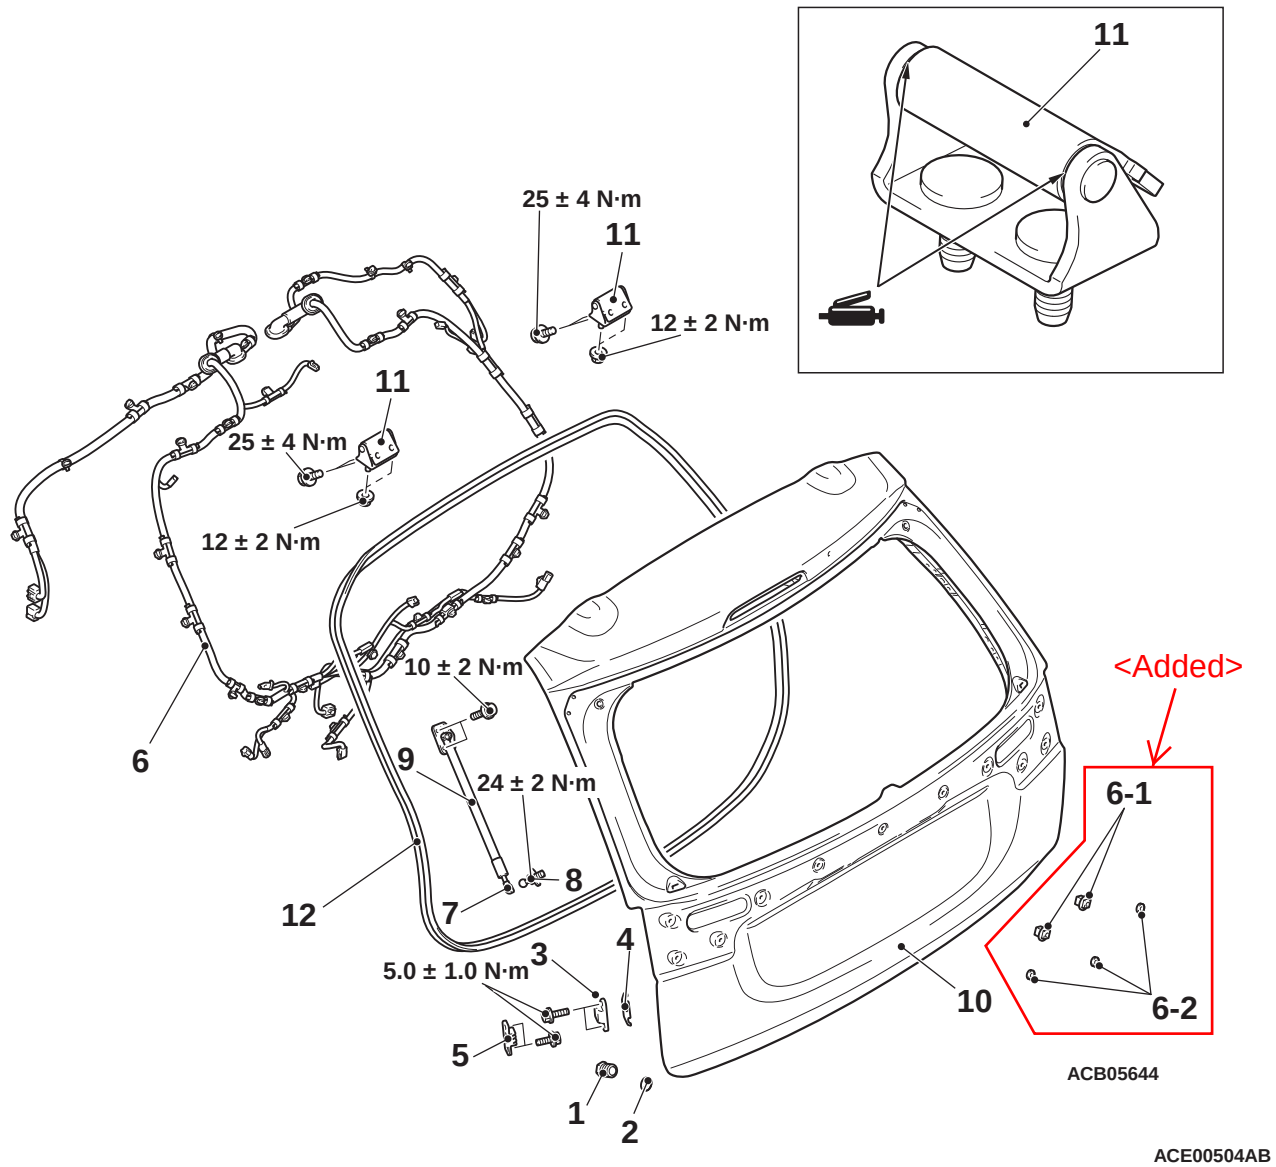

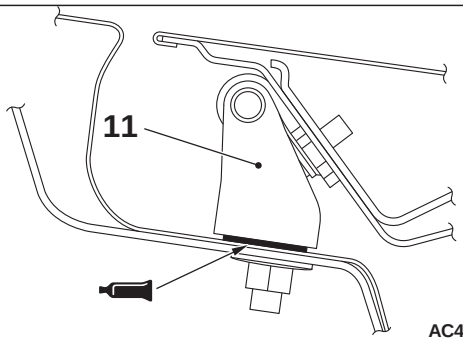

Adhesive: 3M ATD Part No.8531 Heavy drip check sealer, 3M ATD Part No.8646 Automotive Joint and Seam Sealer or equivalent

ACC00264AG

Tailgate assembly removal steps

1. Damper
2. Plug
3. Tailgate damper upper
4. Shim <Vehicles with shim>
5. Tailgate damper lower
6. Tailgate harness

<<A>> 7. Tailgate gas spring connection

8. Ball joint
9. Tailgate gas spring assembly
10. Tailgate assembly

Tailgate hinge removal steps

- Headlining (Refer to GROUP 52A – Headlining .)

>>B<< 11. Tailgate hinge

Tailgate opening weatherstrip removal

- Rear end trim (Refer to GROUP 52A – Interior trim .)

>>A<< 12. Tailgate opening weatherstrip

<Added>


6-1. Screw grommet <Vehicles for Russia>
6-2. Licence plate pad <Vehicles for Russia>

REMOVAL SERVICE POINT

<<A>> TAILGATE GAS SPRING CONNECTION REMOVAL

⚠ CAUTION

- **Do not disassemble or throw the tailgate gas spring assembly into the fire.**
- **Before disposal, make a hole to remove the gas.**
- **Make sure that the piston rod should not collect any foreign particles.**

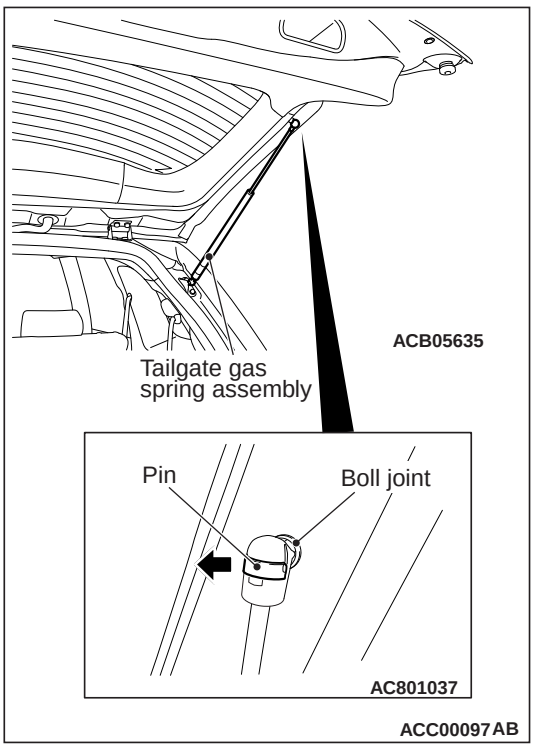

Slide the pin and remove the tailgate gas spring assembly from the ball joint in the direction of the arrow.


TAILGATE <VEHICLES WITH ELECTRIC TAILGATE>


TAILGATE

REMOVAL AND INSTALLATION

M1424001101115

Pre-removal operation	Post-installation operation
• Tailgate trim removal (Refer to GROUP 52A – Tailgate Trim .) • Rear wiper blade assembly, rear wiper motor and rear washer hose removal (Refer to GROUP 51 – Rear Wiper and Washer .) • High-mounted stop lamp assembly removal (Refer to GROUP 54A – High-mounted Stop Lamp .) • Tailgate garnish removal (Refer to GROUP 51 – Tailgate Garnish .) • Tailgate window glass removal	• Tailgate alignment • Adjustment of tailgate height • Tailgate window glass installation • Tailgate garnish installation (Refer to GROUP 51 – Tailgate Garnish .) • High-mounted stop lamp assembly installation (Refer to GROUP 54A – High-mounted Stop Lamp .) • Rear wiper blade assembly, rear wiper motor and rear washer hose installation (Refer to GROUP 51 – Rear Wiper and Washer .) • Tailgate trim installation (Refer to GROUP 52A – Tailgate Trim .)

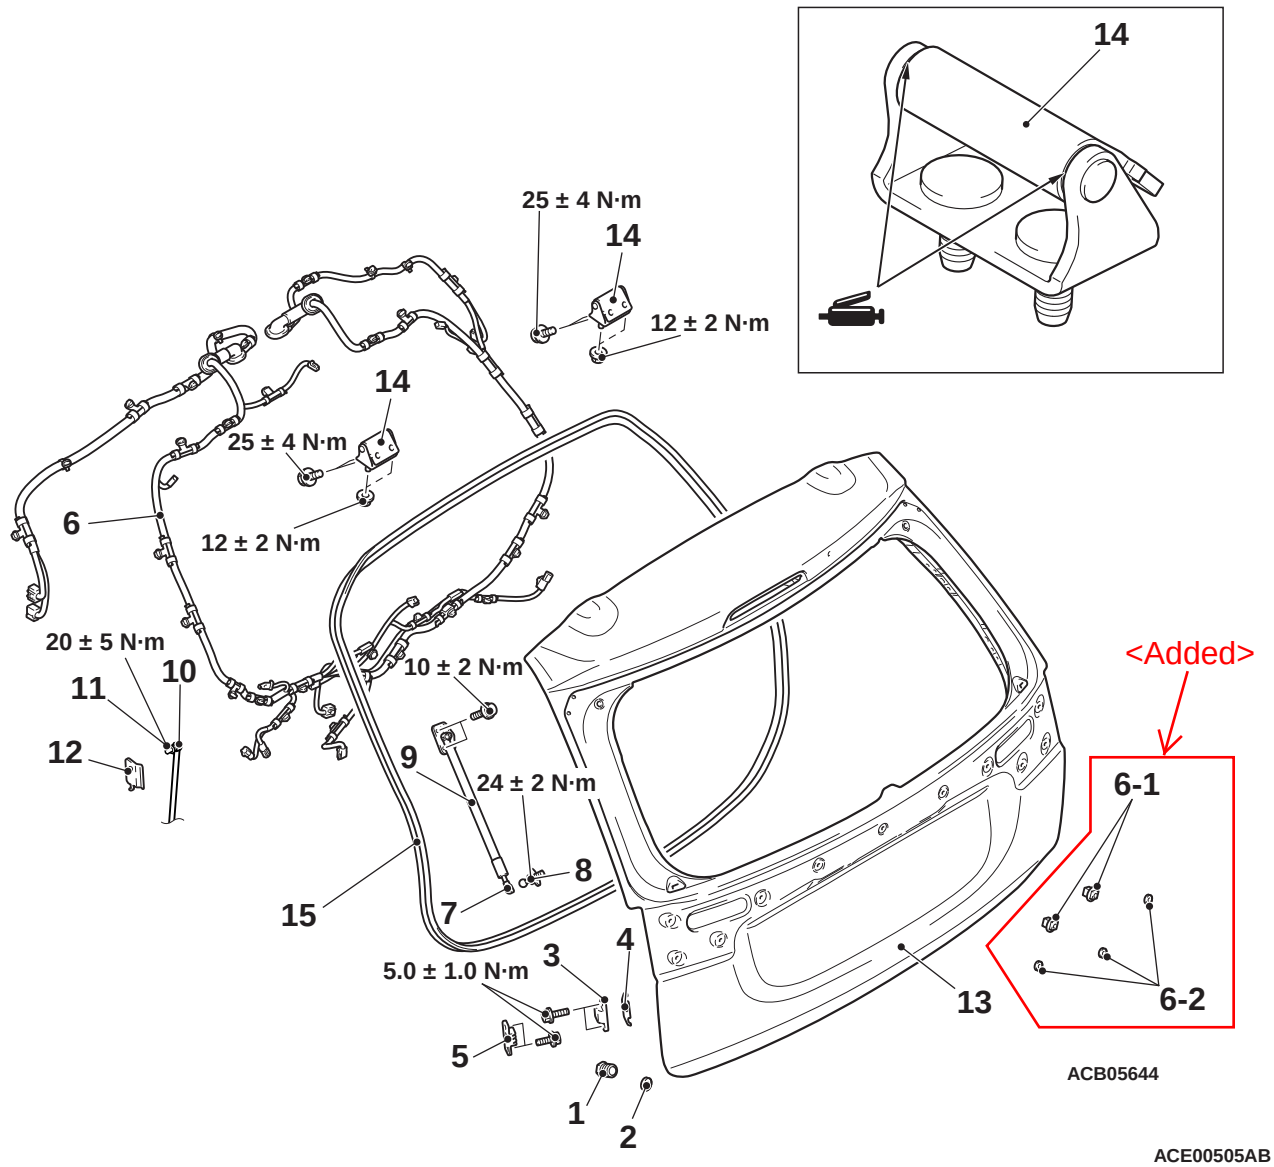

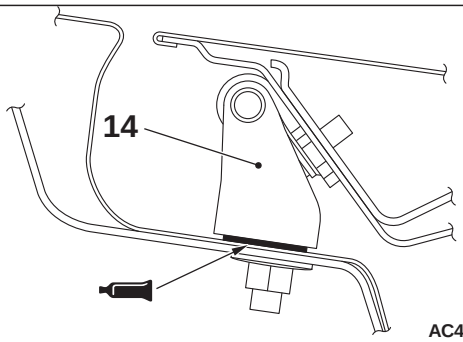

Adhesive: 3M ATD Part No.8531 Heavy drip check sealer, 3M ATD Part No.8646 Automotive Joint and Seam Sealer or equivalent

ACC00264AH

Tailgate assembly removal steps

1. Damper
2. Plug
3. Tailgate damper upper
4. Shim <Vehicles with shim>
5. Tailgate damper lower
6. Tailgate harness

<<A>> 7. Tailgate gas spring connection

8. Ball joint
9. Tailgate gas spring assembly
10. Rod connection
11. Ball joint
12. Plate
13. Tailgate assembly

Tailgate hinge removal steps

- Headlining (Refer to GROUP 52A – Headlining .)

>>B<< 14. Tailgate hinge

Tailgate opening weatherstrip removal

- Rear end trim (Refer to GROUP 52A – Interior Trim .)

>>A<< 15. Tailgate opening weatherstrip

<Added>


6-1. Screw grommet <Vehicles for Russia>
6-2. Licence plate pad <Vehicles for Russia>

REMOVAL SERVICE POINTS

<<A>> TAILGATE GAS SPRING CONNECTION REMOVAL

⚠ CAUTION

- **Do not disassemble or throw the tailgate gas spring assembly into the fire.**
- **Before disposal, make a hole to remove the gas.**
- **Make sure that the piston rod should not collect any foreign particles.**

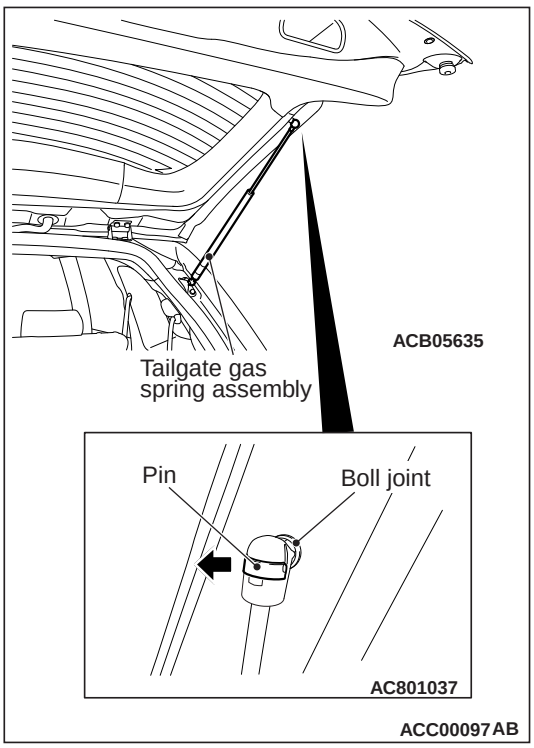

Slide the pin and remove the tailgate gas spring assembly from the ball joint in the direction of the arrow.